


Installation Instruction Sheet

Catalog No.: TLL300 Series

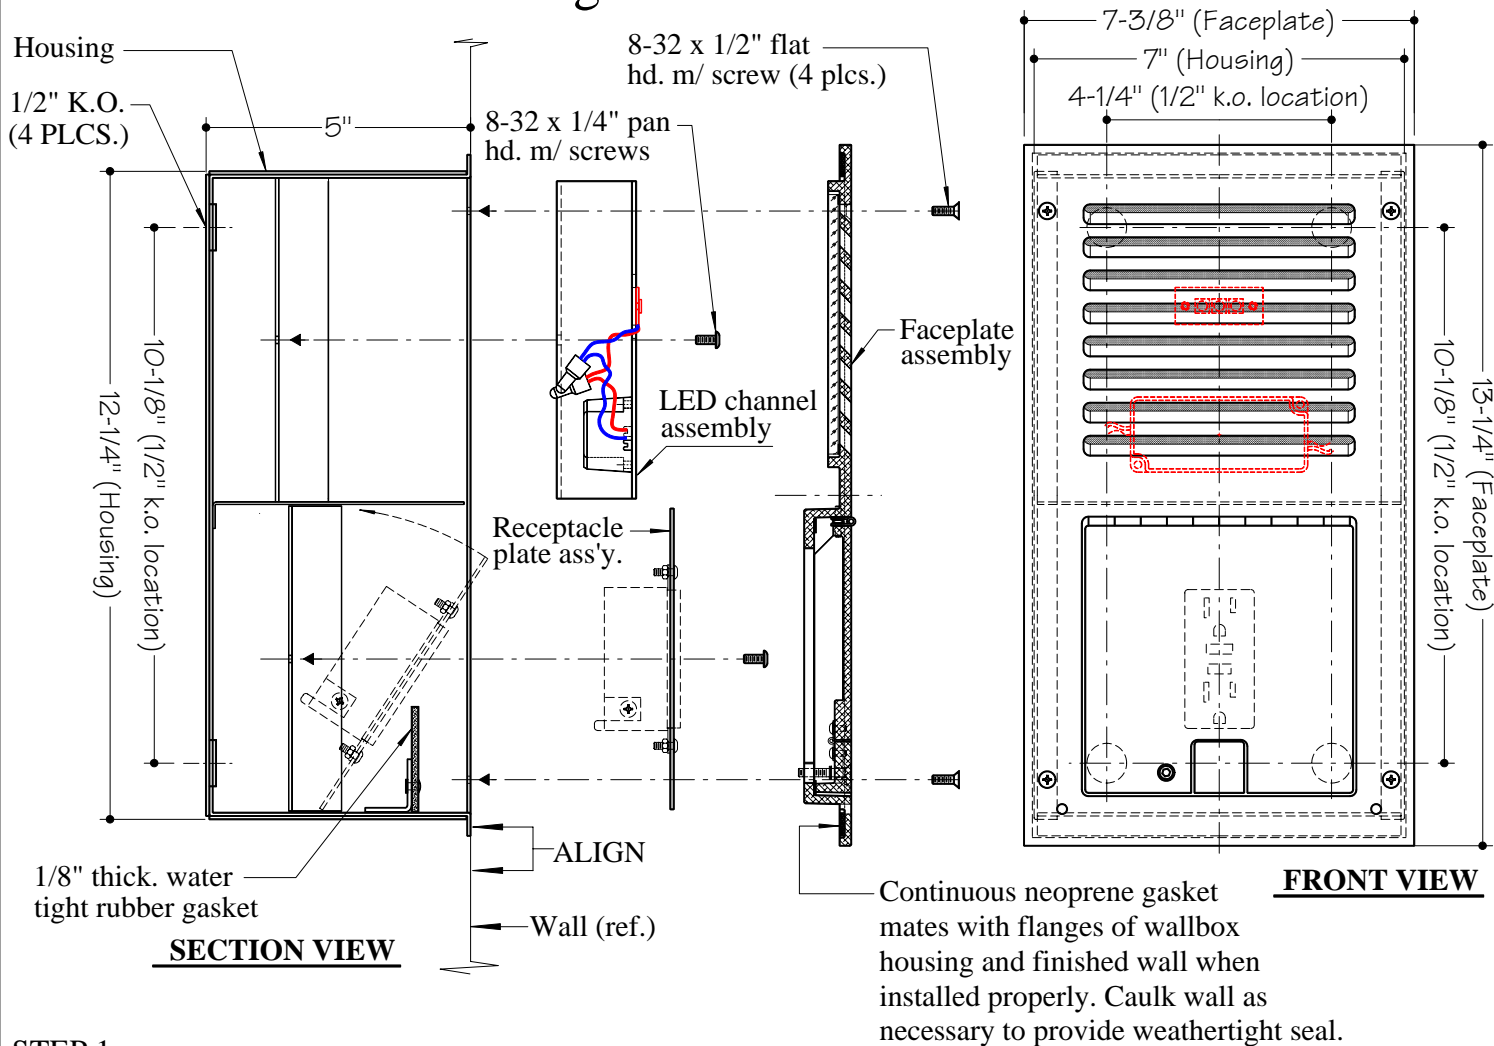

STEP 1

Remove faceplate, LED channel ass'y. & receptacle plate. Bring supply wires through desired entrance of each compartment. Install s.s. housing (suitable for concrete pour) into wall. Be certain that the 1/8" thick water tight rubber gasket is on the bottom side of the housing. Ensure that front housing aligns with finished wall surface. Housing to wall alignment. Ensure that front housing aligns with finished wall surface. Housing to wall alignment ensures proper weather seal.

STEP 2

Ensure that power to unit is off. Splice supply wires with lead wires of wired channel & receptacles. Replace wired channel, wired receptacle plate assemblies and fasten in place. Mount faceplate ass'y. to housing using (4) factory supplied stainless steel flat head m./screws.

NOTES:


- * CAULK AROUND PERIMETER OF FACEPLATE FOR WEATHERTIGHT SEAL.
- * CONTACT WITH ACID-WASH OF ANY TYPE TO ANY SURFACE OF STEPLIGHT WILL/MAY VOID WARRANTY.
- * RECESSED HOUSING NOT SEALED FROM MOISTURE. PROTECTION MUST BE PROVIDED TO PREVENT WATER FROM ENTERING HOUSING.

* THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

COLE
Lighting

Installation Instruction Sheet

Catalog No.: TLF300 Series

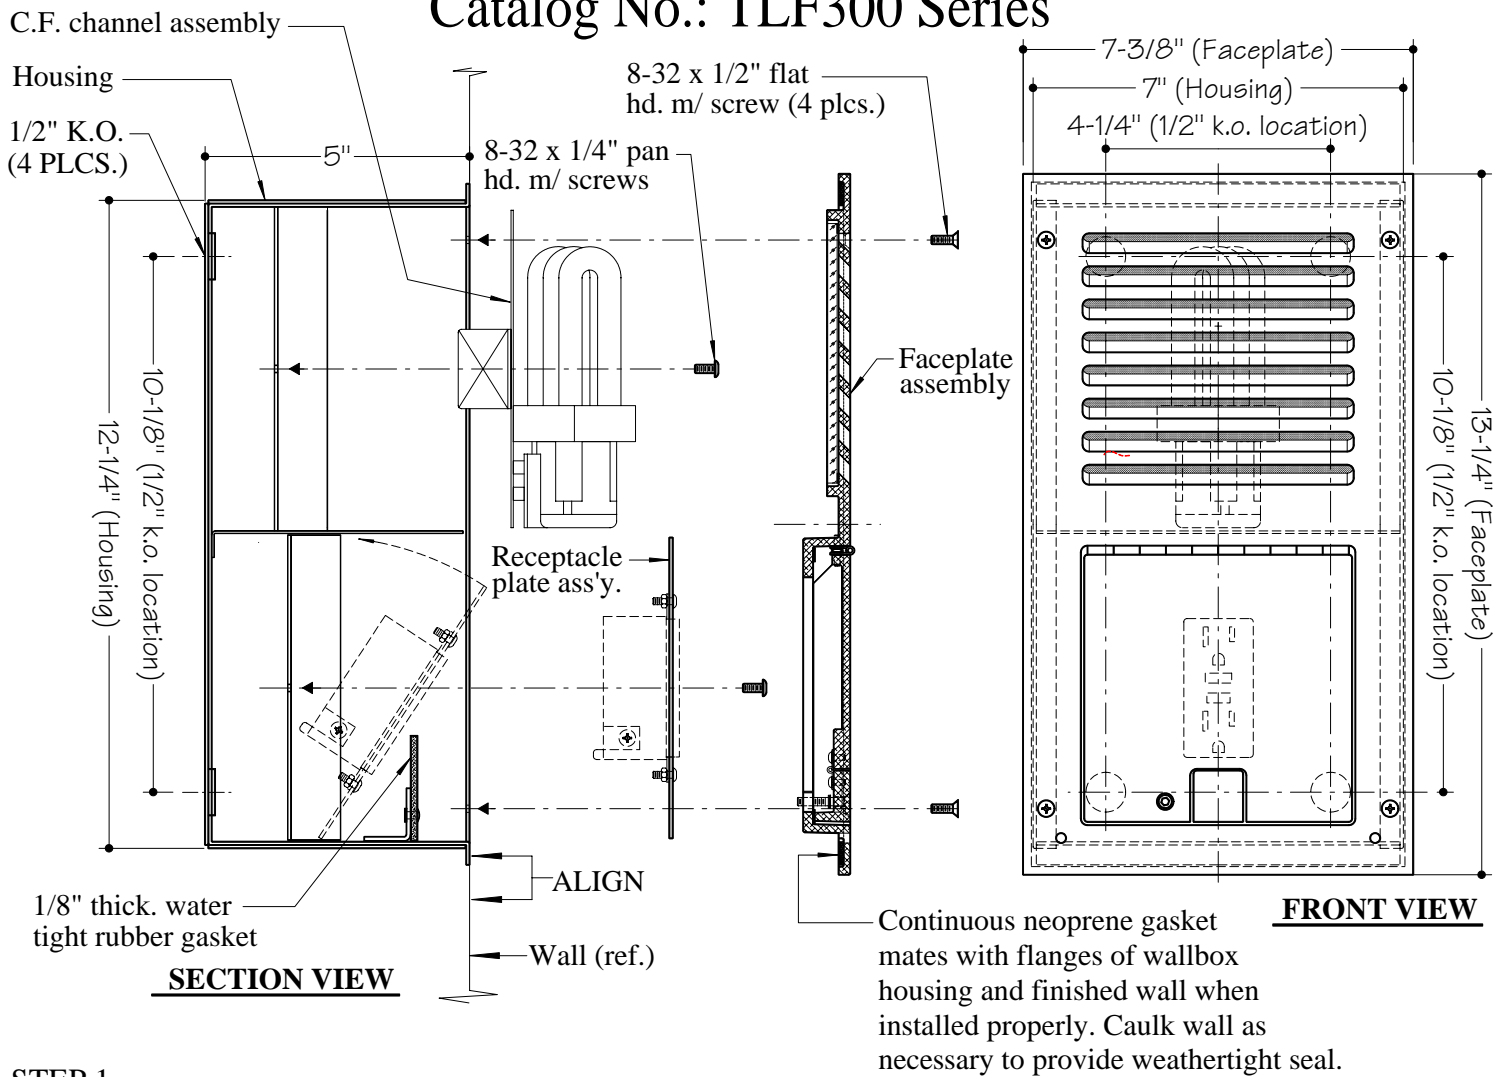

STEP 1

Remove faceplate, C.F. channel ass'y. & receptacle plate ass'y.. Bring supply wires through desired entrance of each compartment. Install s.s. housing (suitable for concrete pour) into wall. Be certain that the 1/8" thick water tight rubber gasket is on the bottom side of the housing. Ensure that front housing aligns with finished wall surface. Housing to wall alignment. Ensure that front housing aligns with finished wall surface. Housing to wall alignment ensures proper weather seal.

STEP 2

Ensure that power to unit is off. Splice supply wires with lead wires of wired channel & receptacles. Replace wired channel, wired receptacle plate assemblies. and fasten in place. Insert proper compact fluorescent lamp into socket. Mount faceplate ass'y. to housing using(4) factory supplied stainless steel flat head m./screws.

NOTES:

- * CAULK AROUND PERIMETER OF FACEPLATE FOR WEATHERTIGHT SEAL.
- * CONTACT WITH ACID-WASH OF ANY TYPE TO ANY SURFACE OF STEPLIGHT WILL/MAY VOID WARRANTY.
- * RECESSED HOUSING NOT SEALED FROM MOISTURE. PROTECTION MUST BE PROVIDED TO PREVENT WATER FROM ENTERING HOUSING.

* THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

COLE
Lighting