

STEP 1 Throw-away cover SET FLOOR BOX HOUSING IN (4) 8-32 truss head POSITION FOR CONCRETE POUR. machine screws REMOVE THROW-AWAY COVER TO GAIN ACCESS TO RECEPTACLE . PLATE, REMOVE RECEPTACLE PLATE, RUN FEED WIRES AND 4 CONNECT CONDUIT. REINSTALL THROW-AWAY COVER, LEVEL WITH FINISH CONCRETE **添** SURFACE. Floor box housing SIDES OF THROW-AWAY COVER assembly SHOULD BE TREATED FOR EASY **REMOVAL AFTER CONCRETE HAS** Receptacles plate HARDENED. Throw-away cover STEP 2 WHEN CONCRETE IS FULLY SET. **REMOVE AND DISCARD THROW-**AWAY COVER & (4) 8-32 TRUSS HEAD MACHINE SCREWS. Cast trim assembly -۲ (4) 8-32 x 1" flat head machine screws \sum Concrete floor C 44.4 PLAN STEP 3 INSERT CAST COVER ASSEMBLY **INTO HOUSING & SECURE IN** Floor box housing PLACE WITH (4) 8-32 x 1" FLAT HD. assembly MACHINE SCREWS PROVIDED. NOTE: THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED. * CONTACT WITH ACID-WASH OF ANY TYPE TO ANY SURFACE OF STEPLIGHT WILL / MAY VOID WARRANTY. COLE * RECESSED HOUSING NOT SEALED FROM MOISTURE. PROTECTION MUST BE PROVIDED TO PREVENT WATER FROM ENTERING HOUSING.

2560 N. Rosemead Blvd. So. El Monte, CA 91733 . (626) 443-2473 . Fax: (626) 443-9253