

# Installation Instruction Sheet


CATALOG No. L131  
LED STEPLITE

## STEP 1

Turn off/disconnect all electric power to the fixture prior to assembly.

Remove wired channel. Bring supply wire through desired entrance of housing. Install spun steel housing (suitable for concrete pour) into wall ensuring that front housing align with finished wall surface and align front housing with two 6-32 tapped holes at horizontal position.

*For Drywall mounting provide a minimum 3-1/16 inch round opening or match O.D. of housing for wall surface alignment. Mount housing to framing or provide additional structure for a secure installation. Ensure that there are no gaps between housing and wall opening for proper trim coverage.*

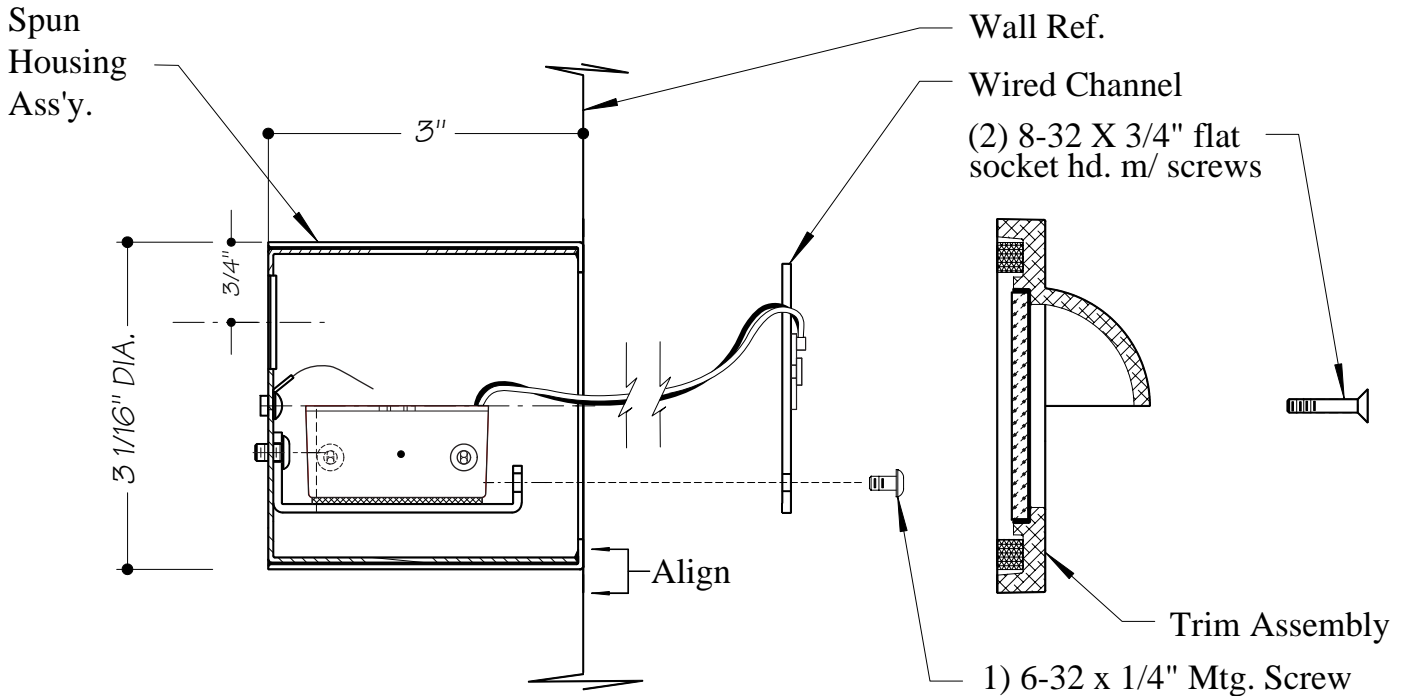

## STEP 2

Ensure that power to unit is off. Remove wired channel from housing. Splice electric supply wires to drive input lead wires. Replace wired channel and fasten in place. Mount finished trim to housing using factory supplied 6-32 stainless steel flat head machine screws.



### NOTE:

- \* THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.
- \* CONTACT WITH ACID-WASH OF ANY TYPE TO ANY SURFACE OF STEPLIGHT WILL/MAY VOID WARRANTY
- \* RECESSED HOUSING NOT SEALED FROM MOISTURE. PROTECTION MUST BE PROVIDED TO PREVENT WATER FROM ENTERING HOUSING

C.W. Cole & Company, Inc.

2560 N. Rosemead Blvd. So. El Monte, CA 91733 . (626) 443-2473 . Fax: (626) 443-9253

**COLE**  
*Lighting*