


# RAILITE INSTALLATION INSTRUCTION

## CATALOG No. C1392 (1 PC. COVER WITH LENS)

C1392W-LED, C1392W-LED-2, C1392W-LED-HO, C1392W-LED-2-HO

C1392DW-LED-2, C1392DW-LED-4, C1392DW-LED-2-HO, C1392DW-LED-4-HO

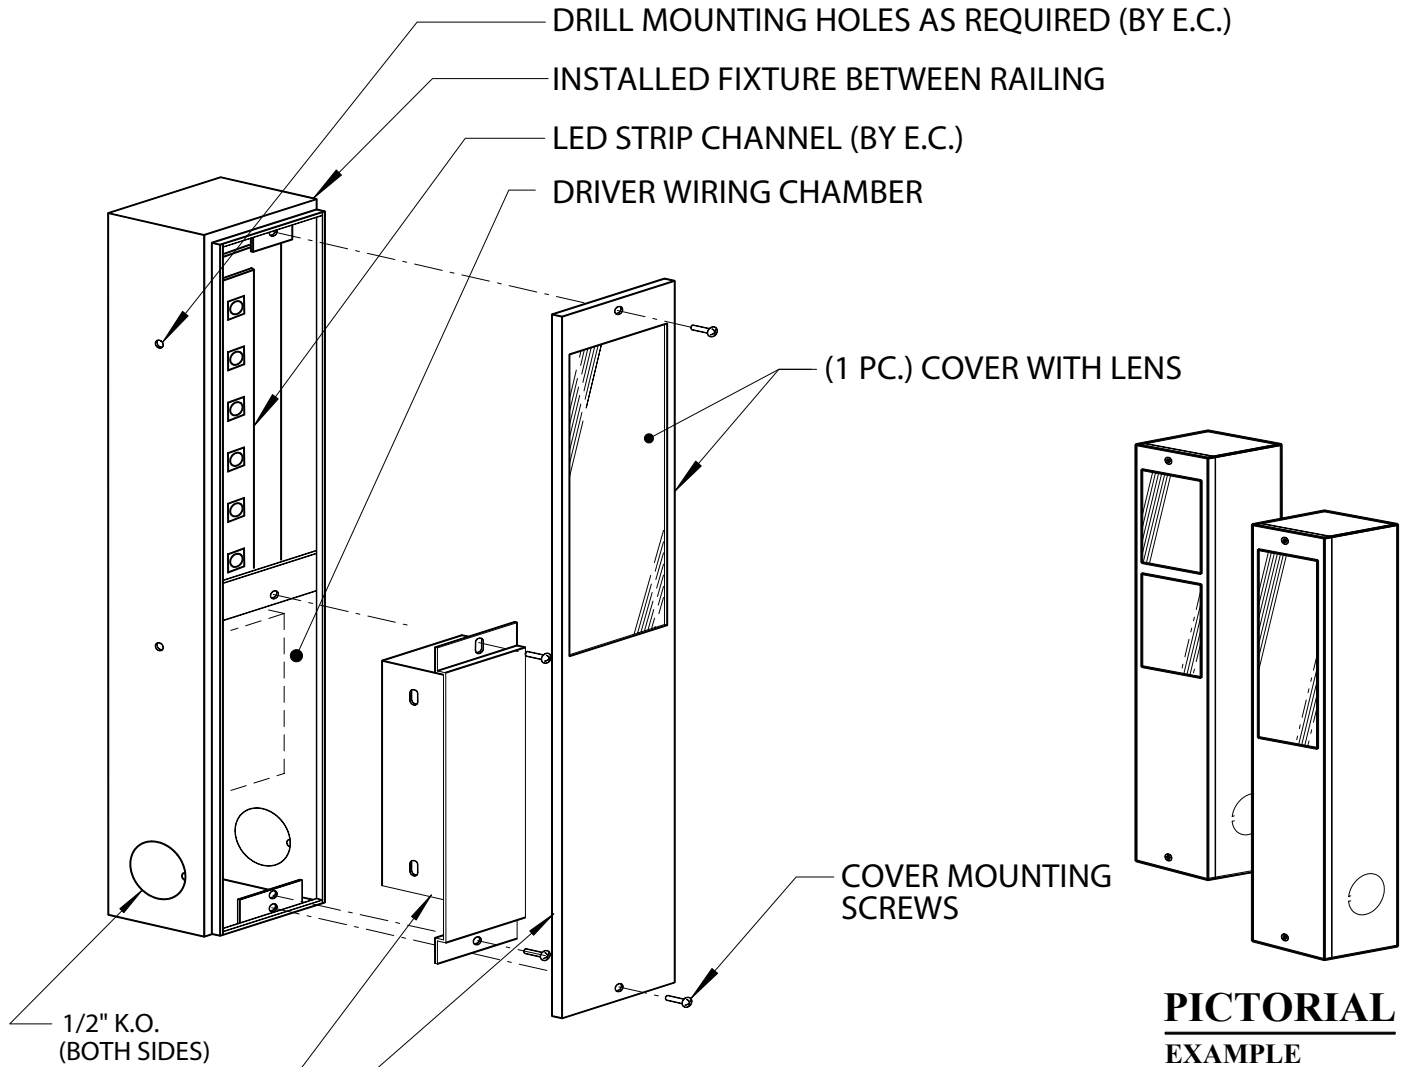

**PICTORIAL**  
EXAMPLE

**STEP-1** REMOVE (1 PC.) COVER WITH LENS.

**STEP-2** REMOVE WIRE ACCESS DOOR, DRILL MOUNTING HOLES AS NEEDED IN SIDES OF HOUSING

**STEP-3** CONNECT CONDUIT TO K.O. ON ONE OR BOTH SIDES TO INSTALL & WIRE. (BY E.C.)

**STEP-4** REPLACE WIRE ACCESS DOOR INSTALL LAMP IF FLUORESCENT AND THEN OUTER 1 PC. COVER WITH LENS.

**"WARNING: DO NOT OVER TIGHTEN SCREWS".**

**NOTE:**  
"THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED".

REVISIONS
<b>COLE</b> <i>Lighting</i>