


LED

INSTALLATION INSTRUCTION SHEET


LED

MODEL 1308 & 1312 DRY CEILING

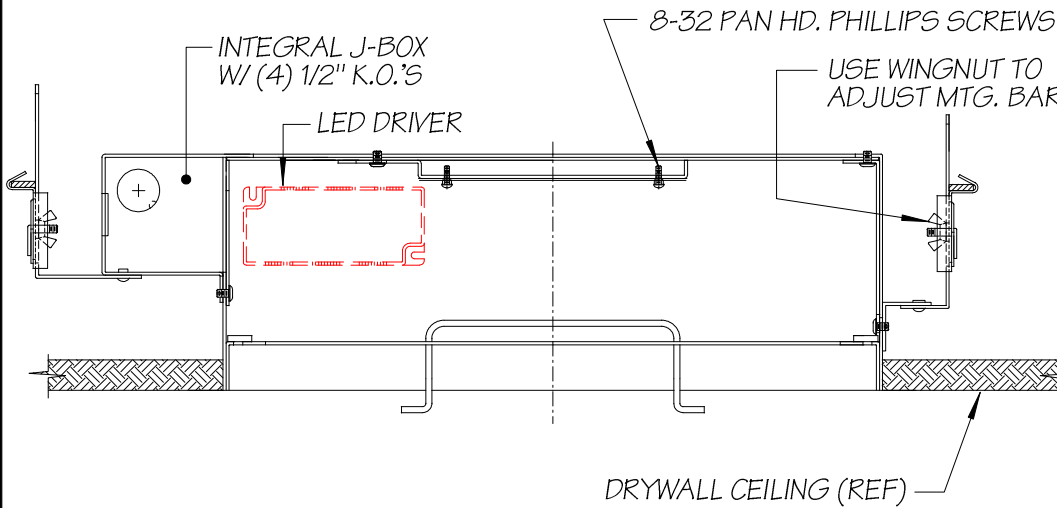

STEP 1


INSTALL HOUSING USING (2) 1/2" x 20" MOUNTING BARS, PROVIDED.
 ADJUST HOUSING SO THAT THE LOWEST POINT IS FLUSH WITH THE CEILING.
 PUNCH OUT DESIRED K.O. IN JUNCTION BOX AND FEED WIRES.
 REMOVE J-BOX COVER TO ACCESS WIRES.

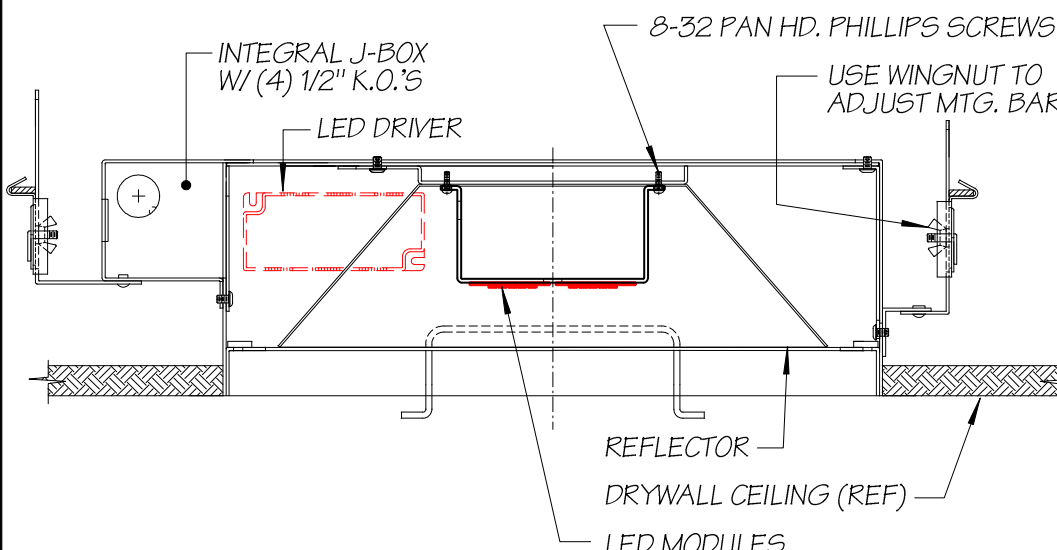

STEP 2

MAKE WIRE CONNECTIONS FROM LED ENGINE TO ELEC. WIRES IN ATTACHED J-BOX

 ATTACH REFLECTOR USING (2) 8-32 PAN HD. PHILLIPS SCREW (INCLUDED)
 LED ENGINE IS ALREADY ATTACHED TO REFLECTOR.

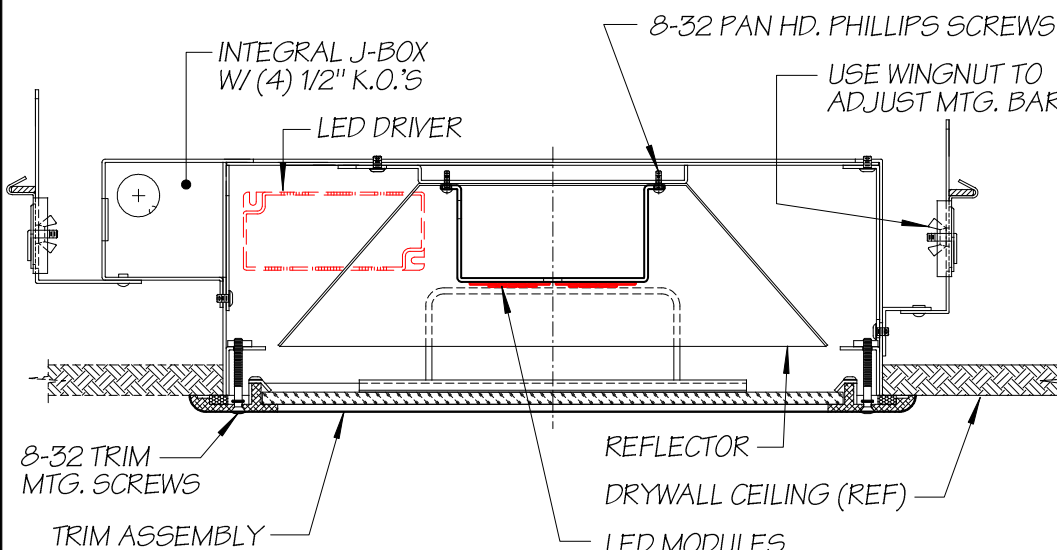

STEP 3

ATTACH WIRE HINGE TO HOUSING AND TRIM.
 ATTACH TRIM ASSEMBLY USING CAPTIVE SCREWS.

NOTE:
 THIS PRODUCT MUST BE INSTALLED IN ACCORDANCE WITH THE APPLICABLE INSTALLATION CODE BY A PERSON FAMILIAR WITH THE CONSTRUCTION AND OPERATION OF THE PRODUCT AND THE HAZARDS INVOLVED.

REVISIONS

- 7-1-11 LED ONLY
- 1-24-13 E.V.
- 11-9-17 T.P.

